

Tork Winch
125 Bysham Park Drive
Woodstock, ON N4T 1P1
Tel: 866-829-4411

Email: cleslie@torkwinch.com

Website: www.torkwinch.com

Transmitter (E-1198) and Receiver (E-1199) Instruction Manual

The E Series wireless receiver is programmed to a particular transmitter channel via seven DIP switches that are located on the receiver unit. These DIP switches can be either switched 'on' or 'off' to achieve certain orientations that corresponds to particular channels on the transmitter. The following describes the step by step procedure on how to set the receiver with a particular transmitter channel.

Step1:

Disconnect the receiver from the power source. Beside the power input you will see a removable flap with two screws (Figure 1).



Figure 1. Removable Cover

Step 2:

Carefully loosen the two screws holding the cover in place. Once loosened the cover should easily slide off. Behind the cover you will find the seven DIP switches (Figure 2).

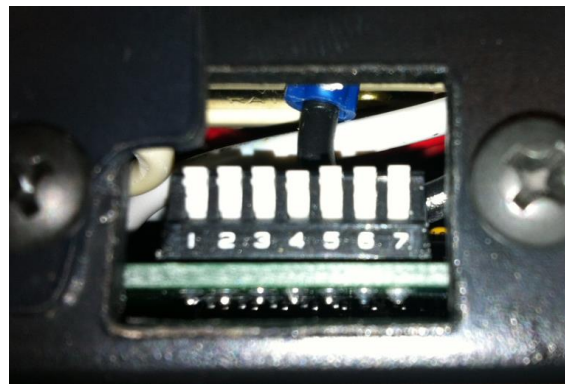


Figure 2. DIP Switches

Tork Winch
 125 Bysham Park Drive
 Woodstock, ON N4T 1P1
 Tel: 866-829-4411

Email: cleslie@torkwinch.com

Website: www.torkwinch.com

Step 3:

Set the DIP switches to correspond to the channel the transmitter is set to. See Figure 3 for DIP switch orientations for channels one through one hundred. For example, if the transmitter is set to channel '13', DIP switches three and four will need to be depressed for the receiver to be set to channel '13' (Figure 3).

1	26	51	76
2	27	52	77
3	28	53	78
4	29	54	79
5	30	55	80
6	31	56	81
7	32	57	82
8	33	58	83
9	34	59	84
10	35	60	85
11	36	61	86
12	37	62	87
13	38	63	88
14	39	64	89
15	40	65	90
16	41	66	91
17	42	67	92
18	43	68	93
19	44	69	94
20	45	70	95
21	46	71	96
22	47	72	97
23	48	73	98
24	49	74	99
25	50	75	

Figure 3. DIP switch orientations

For further questions please contact Tork Winch at (866)-829-4411 or cleslie@torkwinch.com.